

Step 1. Unscrew 4 screws M4 (16-070102-01) with hex L-key 3mm.

Step 2. Replace the washer, in case it damaged (16-030018-01).



Step 3. Open the case carefully. Don't stretch the antenna cable(14-574102-01) that connects antenna to board connector marked "INT".

Step 4. Replace card in SIM-2 slot.

Step 5. Close the case in reverse sequence. Battery cables should trace inside base (should not come out). Antenna cable 14-574102-01 should be loaded between board and battery.

